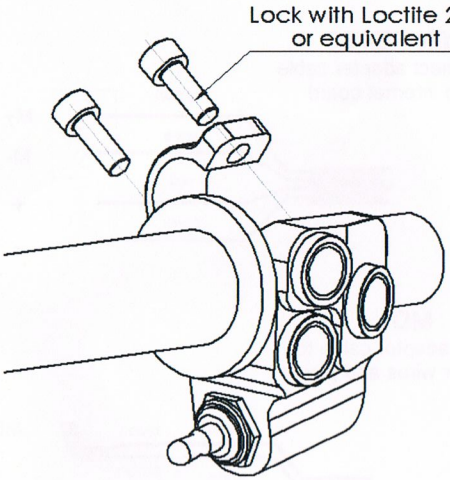

CONNECT POWER TO FUSED PROTECTED CIRCUIT ONLY !

F2R, Lda | Estrada Lumiar, 13, B2, 3Dto, 1600-493 Lisboa, Portugal
Tel : (+351) 969456712 | Fax : (+351) 211454930 | http://www.f2r.pt | mailto:f2r@f2r.pt

f2r
free-to-ride

CR001
RB & Tripmaster Combo Remote

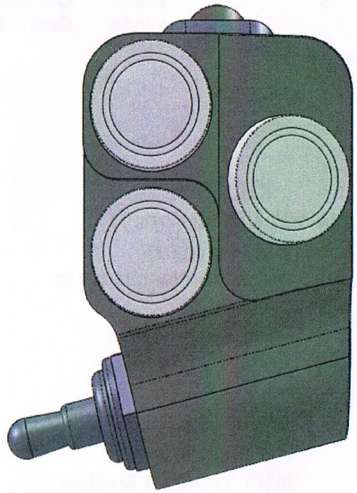

RB holders :

- F2R RB730
- MD
- Touratech RB-TTi
- Touratech RB-TT *MvG*)

Tripmasters :

- ICO Rallye VR Light (grey),
- ICO Rallye 2000 (red)
- Touratech IMO 100R50 Rallye
- Touratech IMO 100R300
- KTM Tripmaster

F2R, Lda | Estrada Lumiar, 13, B2, 3Dto, 1600-493 Lisboa, Portugal
Tel : (+351) 969456712 | Fax : (+351) 211454930 | http://www.f2r.pt | mailto:f2r@f2r.pt

Tripmaster Wiring
(grey female connector)



(outside connector view)

Pin	*wire*	*function*
1	Red	Increase
2	Black	Common
3	White	Decrease

ICO
Rallye VR Light (grey)
Rallye 2000 (red)

Connect CR001 grey connector directly to ICO grey connector.
No cable or wiring needed

Touratech
IMO 100R50 Rallye
IMO 100R300
KTM Tripmaster

Cut connector and connect wires to tripmaster connector.
(adapter cable available soon)

Pin/Wire	*connect to wire* *(on Tripmaster)*
1 (red)	Violet or purple
2 (black)	Blue
3 (white)	Grey

RB Holder
(black male connector + adaptor cable)

f2r RB730

Connect adapter cable to internal board

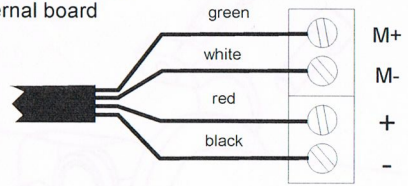

MD

Connect adaptor cable to both motor wires and power

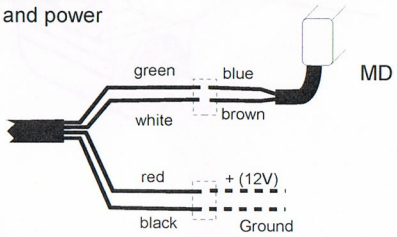

Touratech
RB-TT i
RB-TT *MvG*
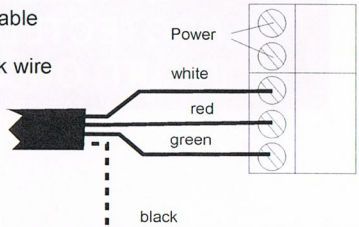
Connect adaptor cable to RB plug.
Cut and isolate black wire